


Before you use the RS232 level interface, please connect the four pins as the shown below.



You can connect the sim900 module with the PC using a USB—RS232 module as shown below.

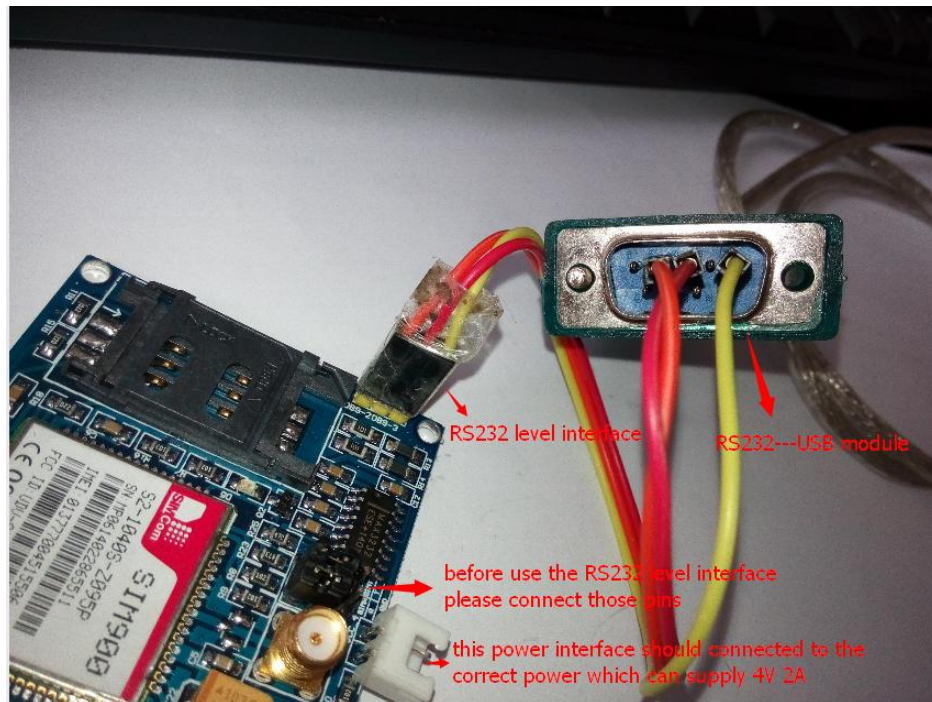

You can connect the sim900 module with the PC using a USB—TTL module as shown below.



Please notice that the power supply voltage should be 3.7-4.2V and it can provide 2A or more